E-FiN – Motorizing Kit







Thank You for purchasing E-FiN SUP motorizing Kit - Customer service 757 423 3037 **1 year warranty on motor, 6 months on battery, under normal noncommercial use.**

E FiN kit includes:

- Motorized 4 speed remote controlled E-FiN
- Wireless Remote control (always use in dry bag)
- Dry Bag for Remote
- 36v lithium Battery Charge, cover ports and store in dry in nonflammable area -
- Charger for Battery

Congratulations, you have purchased the best SUP motorizing system available. The **E-FiN** powers or boosts the speed of your SUP. For fishing, recreation, and as a power booster for a weak paddler and against strong currents and tides.


Note: The E-Fin ONLY fits a standard SUP or surfboard US style center fin box.

Always wear a leash when using a SUP

Always place the remote control in the provided Dry Bag.

BATTERY: Never open battery case - Charge and store in nonflammable area

Rated voltage: 36V 12AH

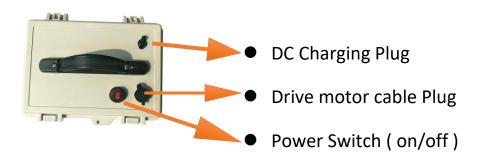

REMOTE CONTROL

Remote control is water resistant, and must be kept in a dry case when in use. Remote control has 3 mode buttons.

△ Power / increase speed to propeller
 ☐ Propeller power off
 ✓ Decrease speed of propeller



Pairing the Remote to Battery:

- 1 Press on button on battery until you hear a beep.
- 2 Press the up arrow and square buttons together for 3 seconds when battery beep heard.









E-FiN only fits SUPs, with a US fin box. Many inflatables require a glue on adapter box.

MAINTENANCE

- Rinse with fresh water or clean with a mild soap, dry.
- Periodically check and observe condition of the fin, battery case, ports, wires.
- Remove battery and fin from board, clean, dry, store in dry area when not in use.
- To protect from corrosion, we suggest coating all metal parts w dielectric greese.

SAFETY

The user of this product acknowledges, understands, and assumes all risks involved. User is responsibility to familiarize with product usage, storage, handling and local marine requirements. A coast guard approved PFD (Personal Flotation Device) is required in most states.

The E-FiN system is made to boost / assist paddling power on a paddle board.

- Always wear approved PFD and a SUP leash when operating a SUP w E-FiN.
- Always place remote in dry case provided during use. Charge Battery fully.
- Check all equipment prior to use. Remove, rinse, dry, charge and store in nonflammable area.
- Avoid shallows, less than 14 " water depth to avoid fin breakage or damage.
- Do not exceed your padding ability; and know all limitations.
- Call Dolsey for Tech support 757 423 3037